

# Rubber Belt Cleaning Stick Installation


## HANDY ADD-ON FOR YOUR HOOFJACK

The FootPro Rubber Belt Cleaning Stick attached to a Hoofjack is a great way to manage dirt build-up on your hoof buffer sleeves. Keeping them clean improves performance and the life of the sleeve. ■



### 1. WHAT YOU NEED:


- TWO SCREWS LIKE THOSE SHOWN (AVAILABLE AT MOST HARDWARE STORES)
- 5/16" OR 3/8" DRILL BIT
- FOOTPRO RUBBER BELT CLEANING STICK
- BATTERY-OPERATED SCREW DRIVER (NOT SHOWN) AND MATCHING BIT
- SELF-PIERCING SCREWS (1.5" LONG WILL EASILY PENETRATE THE HOOFJACK MATERIAL)

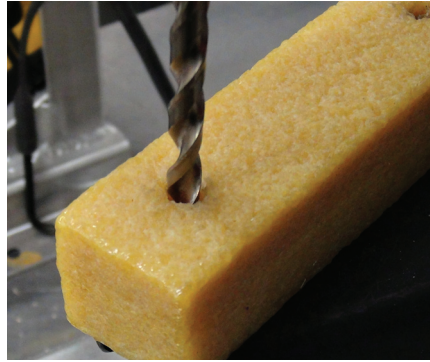

2. THE FOOTPRO RUBBER CLEANING STICKS DO NOT COME PRE-DRILLED. DRILL APPROXIMATELY HALF WAY INTO THE STICK WITH A 5/16" OR 3/8" BIT.




3. LAY THE HOOFJACK ON ITS SIDE, BRACE IT AND APPLY THE SELF-PIERCING SCREWS IN YOUR HOLES. MAKE SURE YOU TIGHTEN UNTIL THE HEAD IS SUNKEN INTO THE STICK ABOUT 3/4", NOT JUST FLUSH WITH THE OUTSIDE.

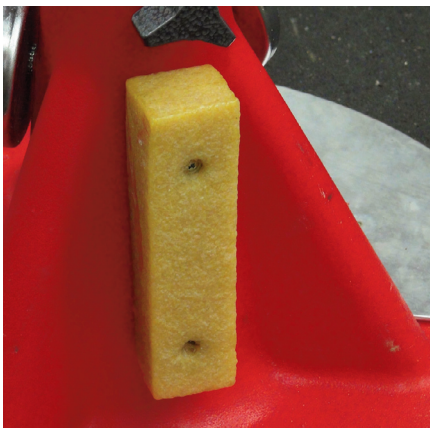

4. TWO SCREWS SHOULD BE ADEQUATE. MOUNTING BELOW THE TENSION KNOB IS THE BEST LOCATION.



5. STICK APPLIED AND READY TO GO.

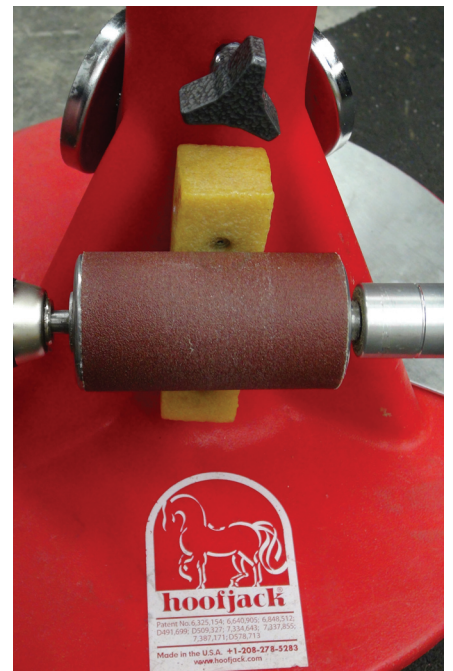

6. WHEN YOUR BUFFER SLEEVE GETS DIRT BUILDUP, SIMPLY RUN THE TOOL AND APPLY SLIGHT PRESSURE ON THE STICK. IT WILL CLEAN UP VERY QUICKLY.